



Kellfri[®]

FLAIL MOWER

35-VKM200

35-VKM250

35-VKM280



READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT !!!
TRANSLATED FROM THE ORIGINAL

TABLE OF CONTENTS	PAGE
Introduction	3
Product information	3
General safety information	4
Product information	5
Workstation	6
Risks when using green space machines	6-7
Warning labels	8
Safe driving on public roads	9
In case of emergency	9
Surroundings	10
Before use	10
Before operation	11
Use	11
Connecting the machine	11
Cutting	11-12
Transport and storage	12
Maintenance	13
Greasing	
Troubleshooting	14
Gearbox: filling oil and grease	15
Adjusting the belt	16-17
Assembly of the machine	18-21
Exploded diagram	22-25
Complaint form	27
Warranty and EC declaration of conformity	28

INTRODUCTION

Thank you for choosing a product from Kellfri AB. By following general safety information, operating instructions and common sense, you will have many years of enjoyable use of the product. Kellfris equipment and products are aimed to be use by active farmers with high demands on functionality.

PRODUCT INFORMATION

- Working width 200/250/280 cm
- Hydraulic side shift
- Heavy-duty wheels for precise cutting height
- Y-flails
- Sturdy construction

acity range from mowing and trimming grass land with some brushwood to chopping stubble and straw.

With help of the High rotor speed, the Y-shaped knives very large capacity to cut and chop all types of materials. To obtain the strength and stability required the Kellfri vertical cutter built with a bent steel construction with framework.

The machines are equipped with a roller that can be easily adapted to the cutting height desired. With the hydraulic side shift to get easy access of ditches and fences. Vertical mower needs a double-acting outlet on the tractor.

INTENDED USE

The implement is intended to cut grass and chop brushwood. Also intended for chopping stubble and straw. Clear the mowing area from any harmful objects such as stones, branches, etc. before starting the operation. Only intended for solitary work. Mounted on the tractor's three-point hitch.

TECHNICAL DATA	35-VKM200	35-VKM 250	35-VKM280
Width	2000 mm	2500 mm	2800 mm
Weight	560 kg	592 kg	650 kg
Hyd. Sideshifting	Ja	Ja	Ja
PTO-shaft	Standrad	Standard	Standard
Power requirements	40-45 hk	45-60 hk	50-70 hk
Knives / Flails	64 pcs	80 pcs	88 pcs
Speed (rpm)	540	540	540

PRODUCT SAFETY INFORMATION

The user of the machine should understand the content of this manual before use, service and installation of equipment to the tractor and all other relevant measures. Never wear jewellery, loose clothing, ties, scarves, belts, unbuttoned jackets that can get caught in moving parts.

Always wear approved clothing that complies with the provisions of accident prevention purposes, such as non-slip shoes, hearing protection, goggles and gloves. Wear a jacket with reflective stickers if the machine is used near public roads.

Contact your dealer, health authority or the nearest equivalent authority for information about the current safety regulations and special provisions to guarantee personal safety.



Always disengage the PTO-shaft, Turn off the tractor engine and apply the parking brake before adjustment is performed on the machine.



Never put your hands or feet under the machine without stopping the machine and the tractor engine. The rotors may continue to rotate for up to 1 minute after the PTO-shaft have been disengaged


- Never leave the equipment with the tractor engine running. Turn off the engine and apply the parking brake when you leave - even for a short while.
- Never leave the machine in a raised position . The hydraulics can lose pressure and the equipment falls down.
- Make sure that all guards are fitted correctly and cannot come loose.
- PTO shaft must be protected along its entire length. Make sure to anchor the safety chain correctly.
- Only you who is driving the tractor must be in the vicinity of the machine during work. No one is allowed to stand underneath any suspended load.
- Check before driving that no rocks are sticking up on the field, or lying objects that can be thrown out while driving.
- Always disengage the machine before performing service or maintenance .
- Do not try to remove things that get stuck during operation. Ensure that the engine had stopped and that the blades have stopped spinning before any measures are taken on the machine.
- Do not drive with the mower if excessive vibration occurs, stop the machine immediately, check and correct the error before continuing your work.
- Do not climb on the mower! NEVER allow anyone to ride on the machine!
- It is forbidden to stand between the tractor / loader and the machine during coupling and uncoupling
- Make sure there is no more pressure in the system before disconnecting the hydraulic hoses. Pull the hydraulic handle from side to side several times to remove the pressure from the hydraulic hoses connected to the quick couplings.
- Disconnect the quick couplings, and use protective caps so that the couplings are not exposed to dirt.

SAFETY INFORMATION

Before using the product, please read the safety information and instruction manual and understand its contents for your own and others' safety. Always keep the safety information and instruction manual easily accessible to the user of the product. Remember that it may be good for your own and others' safety to read the safety information every now and then. If the instructions manual is damaged or otherwise unusable, please contact and order a new one from: Your retailer

The general safety instruction is also available from Kellfris website: www.kellfri.co.uk

Do not use this equipment if you are feeling sick, tired or in influence of alcohol. Nor if you are under the influence of strong medications or drugs, suffering from strong depression or severe mental illness. Always follow the general traffic rules and regulations and the rules of the Animal Welfare Act. Persons under 15 years old and people with mental illness may not use these product.



The product must not in any circumstances be modified without permission from the manufacturer. Unauthorized modification of the machine and/or accessories can cause greaseal injuries or death to operator or others.

IMPORTANT!

Warning labels identify important safety aspects in this manual to help you and others avoid hazards and accidents. When using the machine: Take extreme caution!



This symbol indicates that a serious accident will occur if the instructions in the manual are not followed. The accident leads to serious injury, possibly death or serious property damage.



This symbol indicates that an accident will occur if the instructions in the manual are not followed. The accident leading to serious injury or property damage.



This symbol indicates that an accident may occur if the regulations are not followed. The accident results in personal injury or property damage.



N.B! indicates the potential of failure if the regulation is not followed.

When using the machine in a company, the employer has the responsibility to ensure the user of the machine has theoretical and practical knowledge of the machine and the operation is done safely. Follow the country's Health and Safety regulation. For more information, contact your Health and Safety Executive.

WORKSTATION: The driver must remain in the driver's seat during the entire operation. If the operator needs to leave the tractor, the PTO must be disengaged, the tractor engine turned off and the parking handbrake applied.



NEVER RUN THE HYDRAULICS WHEN THE TRACTOR IS TURNED OFF

What to consider when using machine equipped with a PTO shaft


The transmission gearbox is protected by both the drive shaft and the shear bolt. All protection should be effective and in good condition. If protection condition is poor or worn, the guard should be replaced before implement is used.



If the PTO shaft is not properly protected, this can cause death because it can catch parts of the body or clothing and cause life-threatening injuries.

Make sure the safety chain is properly anchored to the PTO-shaft and that the PTO shaft is protected over its entire length. Ensure that PTO shaft spins easily inside the protective tube. Hold the spline groove clean and well lubricated so that the drive shaft can be connected easily.

Read PTO shaft manual before adjusting and using the PTO shaft.



Never use a tool or product with defect safety equipment.

Warning!

RISKS AND HAZARDS OF USE OF MOWING MACHINE

Risk of crushing

Bystanders may be injured when the machine is lowered to the cutting position. The machine has crushing points around the hinge areas and between the three-point hitch mount and the main body.

Rotating blades

All persons will be at risk of injury if they stick out their hands or feet under the machine when it is lifted from the ground and the blades are rotating.

Risk of pinching or risk of trapping body parts

This risk is common in transmission devices such as belt drives, gears and rollers. Ensure that all guards are fitted correctly.

Risk during disengaging of the machine

The heavier the rotating part is, the longer it will continue to rotate after the drive has been switched off. This feature is called "free-wheeling". Rotating blades and other components, such as drive shafts, etc. will continue to spin after the drive has been disconnected. Injuries may occur:

- When the operator releases the equipment, and try to clean or adjust the machine before the components have stopped rotating.
- When the shear bolt in the protective device in the power take off breaks and rotors still spinning while the PTO has stopped. Operator's awareness is the key to safety around rotating parts. Do not raise the machine while the blades are rotating.

Risk of ejecting objects

Machines that mow throws out material while driving. Foreign objects such as rocks, sticks and other debris can get into the machine and ejected with tremendous speed. Covers on the sides and the front prevents these objects to be thrown out but it does not always guarantee that the guards catch everything that is thrown out.

Bystanders or animals that standing on the way of the projected object can be seriously injured. Never allow bystanders within the vicinity of the machine. Respect the machine's danger zone. **Danger zone 25m!**







Noise

Please note that the machine is normally used outdoors and that the position of the operator is in the driving seat of the tractor. It is advisable to read the regulations specified in the tractor manual and maintenance instructions.

The sound pressure level exceeds 70 dB during operation. Hearing protection should be used while driving.

WARNING LABELS

Make sure that the warning labels are always visible, clean the warning labels if necessary. Do not wash with high pressure washer directly on the warning label. If any part of the decal is worn or label becomes frayed or otherwise unreadable, order new decals.

SYMBOL	EXPLANATION
	Read the instruction manual! Before work begins Warning! Before maintenance, service, coupling and uncoupling of the machine the tractor's engine should be switched off and the ignition key removed.
	WARNING !Rotating PTO- shaft! Rotating knives !
	Danger zone 15 m Warning! Ejection of objects
	NEVER allow anyone to be on the machine! The machine is designed for solitary work.
	Prohibition to stay on the machine Warning! Risk of crushing behind the tractor when coupling and uncoupling the machine. No one shall be nearby when coupling and uncoupling the machine.
	Warning! Accident risk for children
	The equipment is CE-marked

Accidents involving slips and falls

Accidents involving slips and falls often happens as the result of:

- Slippery surface
- Uneven steps and platforms

The potential for slip-and-fall accidents can be significantly reduced by using good judgment. All unprotected rotating machinery is a potential for accidents. Damage usually occurs when loose clothing or long hair is caught and wrapped around rotating parts such as transmission shafts or drive shafts on the machine. Make sure all guards are fitted.

Drive safely on public roads

Always follow traffic rules on public roads and follow the rules that applies for driving tractor with towed equipment on public road.

Make sure reflectors, warning and / or warning flag that indicates protruding equipment is mounted on the machine or the tractor. These indicators must be installed properly and must be visible and easily seen by other drivers on the road.

No one is allowed to lean on or climb on the machine during transport or during work.

NEVER allow anyone to ride on the machine!

The maximum transport speed should not exceed 20km /h

IN CASE OF EMERGENCIES

In case of an emergency please dial 112.

Keep cell phone or emergency phone available specially when working alone. First aid kit and fire extinguishers must be kept easily accessible during all work, maintenance and service.

PERSONAL PROTECTION

Always use appropriate protective equipment. Do not wear loose clothing or jewelry when working with the implement.



SURROUNDINGS

Make sure your working area is clear from people, children and objects before installing and using the machine. Risk of serious injuries can occur during operation. Take an extra caution when children are in the area where the equipment/ product is being use or stored. Check the area for low hanging electrical wires. Be careful when working on slopes and near ditches. Always work alone with single - purpose tools/products. Never have junk lying in your area. Keep working areas clean. Always respect the risk zone.



DANGER!

Children in the area should be supervised.

BEFORE USE

Read the safety information and instruction manual carefully. Be sure you understand the safety measures, instruction manual and warning labels. Use common sense when operating the machine and use appropriate personal protective equipment.

Always check the performance and the machine combination that are used. It's highly important these matches in a satisfactory manner. This is to ensure the product or the function and most important yours and others safety. Do visual inspection of equipment or product before use. Fix or replace damaged or worn parts immediately to reduce the risk of injury. Lubricate moving parts and check that all screw-nuts and bolts are tightened.

Learn and remember the correct working methods. Beginners should always keep a low speed, use extreme caution before routine and product knowledge is achieved. The user/customer is responsible to handle the situation correctly. The product should not be taken into use unless it can be done in a safe way for the user.

Read the tractor's manual before connecting implements.

BEFORE OPERATION:


Before operation:

- Important! check the tightness of all bolts and nuts, special bolts , clamp bushings and pulleys! IMPORTANT! Check the mounting bolts , taper bushes and pulleys



Warning!

For safety, this product should only be used in the manner described in this manual. The user is responsible for the instruction to be read through and followed

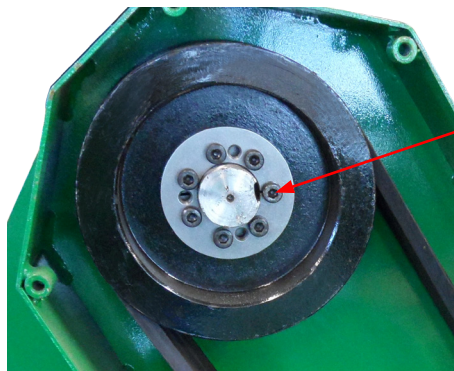

Check clamping bushings for pulley. The bolts must be tightened periodically.

Check belt tension, if necessary tighten,

- Check Knives / flails, make sure they are well secured. CHANGE broken, cracked or worn knives / flails.
- Check all guards, safety devices. Remove any transport safety.
- Lubricate the PTO shaft and the other lubrication points.

OPERATING THE MACHINE

Only people who understand the safety information and instructions in this manual may operate the equipment. Be alert and careful when working with the machine and only use the tool or product in the manner described in this manual.

When working with equipment that has moving parts, there is always the risk of injury. Be careful when working with equipment equipped with hydraulic hoses, oil under pressure can penetrate the skin. Seek medical attention immediately if this occurs. Always work alone with the tools that are defined as single purpose tools. Respect the equipment's risk zone. Manoeuvring is done from the driver's seat

Connecting the machine

- Connect the equipment to the tractor's rear three-point hitch.
- Connect the PTO-shaft. Anchor chain well.
- Connect the hydraulic hoses on the tractor's double acting valve
- Ready to use.

OPERATION

- Check the area to be mowed and remove objects and debris that can be caught and ejected by the blades.
- The amount of grass to be cut determines the speed forward; low speed usually gives the best results, it is best to cut the grass when it is dry. Mowing wet grass can cause clogging leading to grass clumps behind the cutting unit. When mowing high grass, raise the cutting unit and cut the same area twice - the second time with a lower cutting height, leave at least 24 hours between the first and second cut so that the grass can dry .
- Lower the cutting unit to the ground. Connect the PTO-shaft so that the blades start rotating.

Drive the machine at 540 RPM, start with the lowest possible speed, check that the mower works effectively with the engine at 540 rpm without any effort.

Stop and check that the cutting unit is correctly adjusted after the first 10 meters. Adjustments to the machine should always be carried out with the tractor engine switched off.

- Do not make sharp turns and Do not reverse when the machine is lowered to the ground.



Do not connect the PTO -shaft when the machine is in the raised position or at full throttle.

- The rotating blades can forcibly hit loose stones from the ground. It is therefore important that the operator of the machine ensures that no one is near the machine and the tractor during operation.
- The machine is equipped with protective covers and shields that prevent soil and stones from being thrown around and protects the operator from the rotating blades.
- When mowing high grass, it sometimes happens that the grass wraps around the rotor and blades. Please pay attention when noise is heard from the machine or vibration occurs. Turn off the tractor, disengage the machine and check that blades rotate freely.



IMPORTANT! Make sure that the rotors have stopped rotating before lifting the machine and checking the blades. Wait a few minutes to ensure that the blades have stopped spinning.

After use

- Parking is not allowed with the equipment above ground, but is done with the equipment resting on the ground.
- Rinse the equipment if necessary.

TRANSPORT AND STORING

Make sure there are no people, children and foreign objects around the area before transporting the machine. Always take an extra caution during the transport. Ensure that the product is well secured and that transport brackets are mounted. Always place the load as low as possible. Respect the danger zone even during transport. When lifting the equipment, never go underneath suspended loads. Trailer used for transport should have working brakes. Always store the machine in a dry place preferably underneath a cover when not in use. Ensure that the product is stable and not likely to tip over. Never let children play where the machine is being stored. Always keep in mind the risk of tipping!

MAINTENANCE AND SERVICE

Always turn off the tractor engine before maintenance or servicing. Ensure that the unit is stable and cannot tip over during maintenance and service. Replace damaged or worn parts immediately to reduce the risk of abrasion. Always perform maintenance, service and inspection, as recommended. Use only original replacement parts or spare parts with equivalent performance to reduce the risk of damage. All repairs and connections with electricity must be performed by a qualified person.

Check that all bolts and nuts are tightened after maintenance and service. Always test the machine before work is started.


RECYCLING

Disposal of the product, disassemble and transport to the municipality's recycling station. Contact your local authority for further information.

SERVICE	INTERVAL	
Flails	Before each run	Replace any defective blades. Sharp blades provide better results. When replacing, make sure bolts are tightened properly
	During operation	Listen for noises
	After each run	Check
Gearbox	Before each run	Check level
	50 operating hours	First oil change
	100 operating hours or once a year	Oil change
Rotor	Every 20h operating hours	Lubrication
Belt	After 1 hour of operation	Check and tighten the belt. The press belt should move 20 mm
Implement	After each run	Flush away the soil and grass with water
Greasing	First time after 2 hours of driving after 20 hours of operation	Lubricate all points regularly



WARNING: Leaking oil or fuel under pressure can penetrate the skin and can cause serious injuries. Do not use your hands when searching for leaks. Use a piece of cardboard to search for leaks.

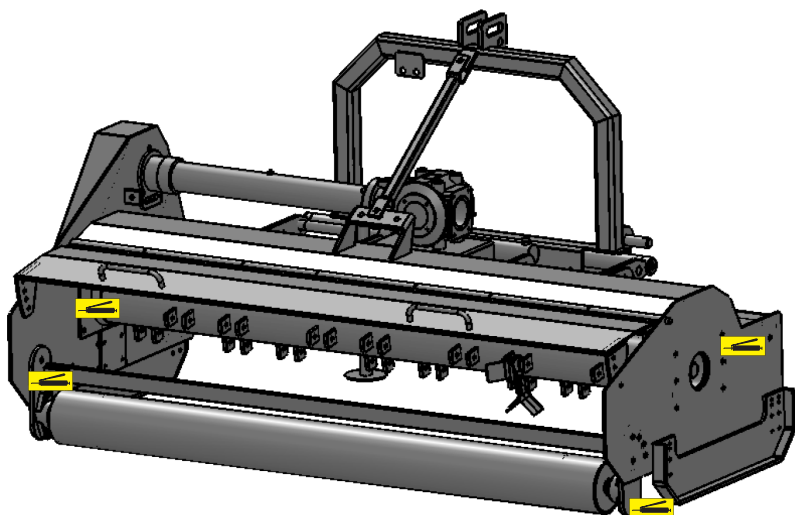

LUBRICATION POINTS


Lubricate lubrication points regularly and every time you rinse the machine to remove the water that seeped into the bearings during rinsing.

Unnecessary wear and mechanical damage may result from insufficient lubrication. Use the universal lubricant.


IMPORTANT! Avoid applying too much grease. Dirt gathers easily in exposed grease and cause increased wear. After greasing, wipe off excess grease from the grease fittings and bearings.

PROBLEM	MEASURE
Flail mower cuts unevenly or poorly	Check that the flails are undamaged and secured properly. Adjust the support roller and make sure it is attached correctly. Check and tighten belts
Cut sound changes	Check roller. Check the tension of drive belts. Check flails.
Vibrations	Check flails
The hydraulic system is not working	Check hoses and fittings


GEARBOX

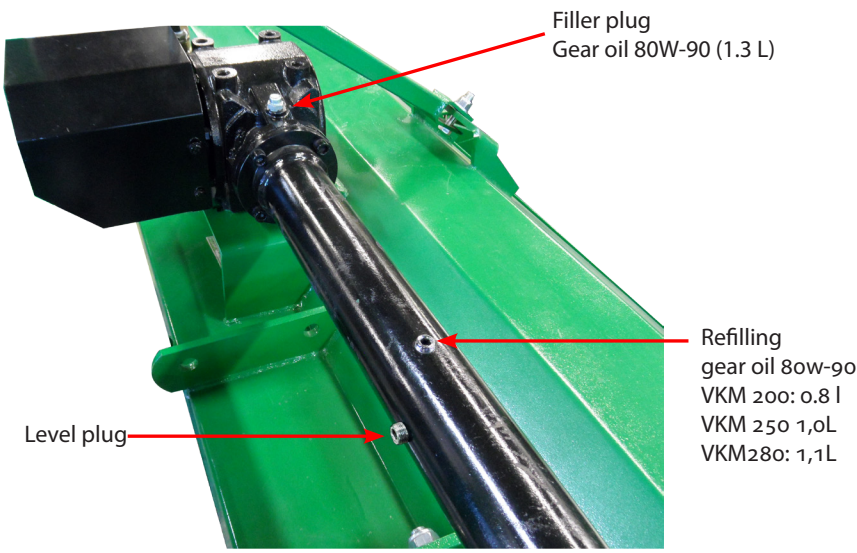

IMPORTANT! ALWAYS CHECK THE OIL LEVEL AND GREASE BEFORE DRIVING!

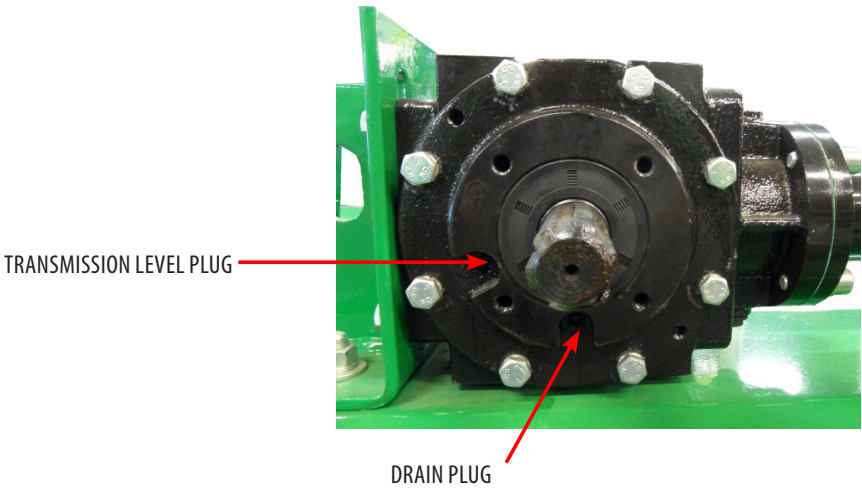

ADJUSTING BELT

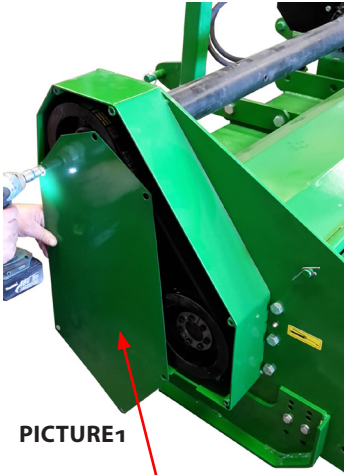

PICTURE 1


BELT PROTECTION

CHECK THE BELT TENSION REGULARLY
WHEN PRESSED THE BELT SHOULD MOVED 20MM
(SEE PICTURE 2 -10MM ON EACH SIDE)



PICTURE 2

CHECK AND TIGHTEN BELT AFTER AN HOUR OF DRIVING !!

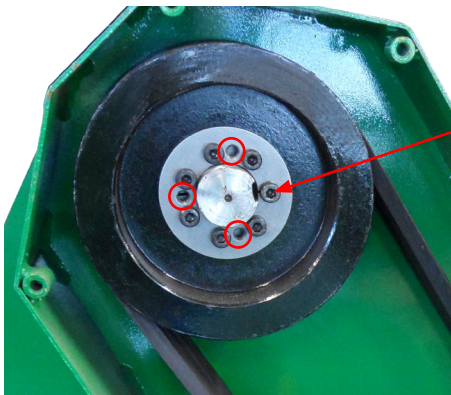


Bolts for the pulley must be tightened periodically

- To keep clamp bushings in place when replacing the belt or pulley:
- Loosen and remove the three bolts from the pulley
- Install them in the threaded holes on the clamping bush (See the marked holes in the picture)
- Then remove the remaining bolts.
- Change the belt / pulley and then reinstall all the bolts.
- Tighten and check belt tension, adjust if necessary.




**CHECK AND TIGHTEN THE BELTS PERIODICALLY.
NEW MACHINE IS CONTROLLED AFTER 1-2 HOURS DRIVING AND THE BELTS ARE
TIGHTENED**

ADJUSTING BELT

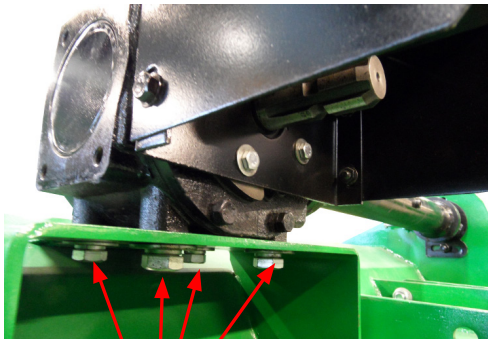


MOUNTING BOLTS 4 PCS

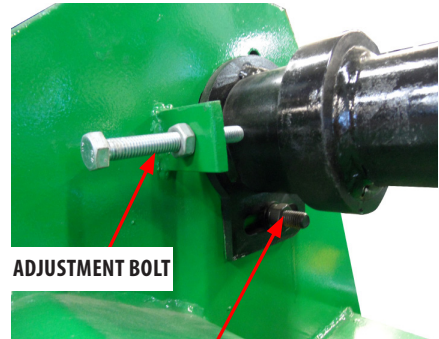

MOUNTING BOLT

Release the fastening bolts on the gearbox and pulley (see picture). Then adjust the adjustment bolt until the belts are tensioned enough.

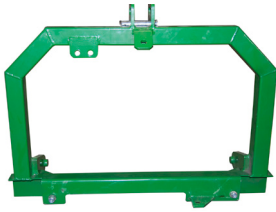

3 point attachment



cylinder



hydraulic hoses



outrigger



roll + housings



Scrape



wear skids



stabilizing bar


ASSEMBLY: Remove all packing materials and check that all parts are present.

Delivered with PTO-shaft.



- 1 pc 3 point attachment
- 1 pc hydraulic cylinder
- 2 pcs hydraulic hose
- 1 pc rolling
- 2 pcs housings roller
- 1 pc scraper
- 2 pcs wear skids Note! right and left
- 1 pc strut is
- 1 pc stabilizer bar

It is recommended that installation is carried out by at least two people because of the machine and components weight. Be careful during the assembly, be aware of the risks and ensure that the machine is stable and can not tip over or fall down when it is lifted.

1. Demount roller to release the 3-point attachment.

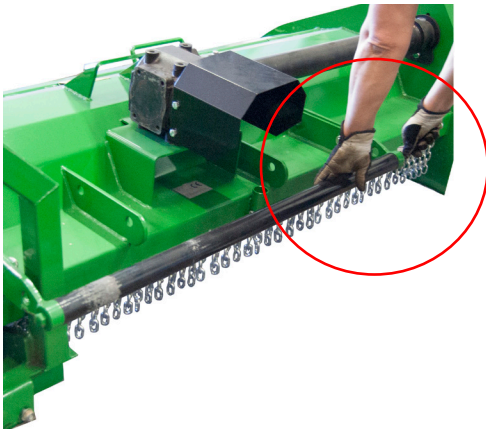


2. Remount roller and mount 3 point attachment on the roll. Tighten all bolts

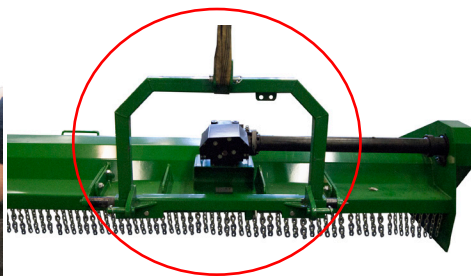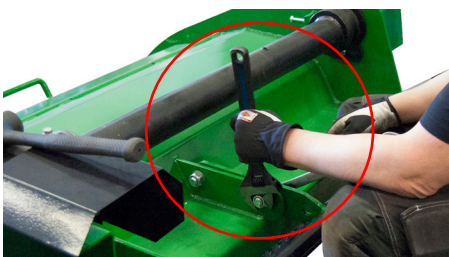

3. Attach the stabilizing bar between 3-point frame and the bracket on the protective cover
- tighten



4. Mount the hydraulic cylinder behind the three point attachment, the pin on the cylinder is mounted on 3-point frame. Then install hydraulic hoses on the cylinder

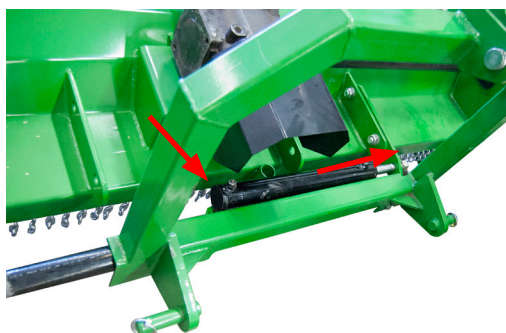

5. Mount the skids on both sides of the machine, lift the machine for easier assembly. Select the desired height and tighten the bolts.




6. Prepare roller before mounting it. Mount the install bearing housing in the endings of the roll. Be careful during assembly, there is a risk of crushing. Lower the machine on the ground, open the protective cover behind the machine and roll the roller towards the machine. Assembly the the roll in the same height as the skids. The wear skids and roller shall be in level with each other when the machine is resting on the ground.




7. Mount the the scraper above the roller, see picture below. Tighten the bolts.




8. Check the belt tension, lubricate all lubrication points and tightening all bolts, nuts and fittings before you testdrive the machine. Install the outrigger.

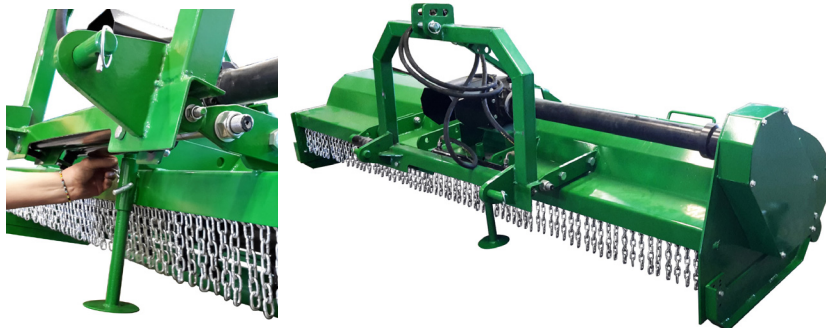

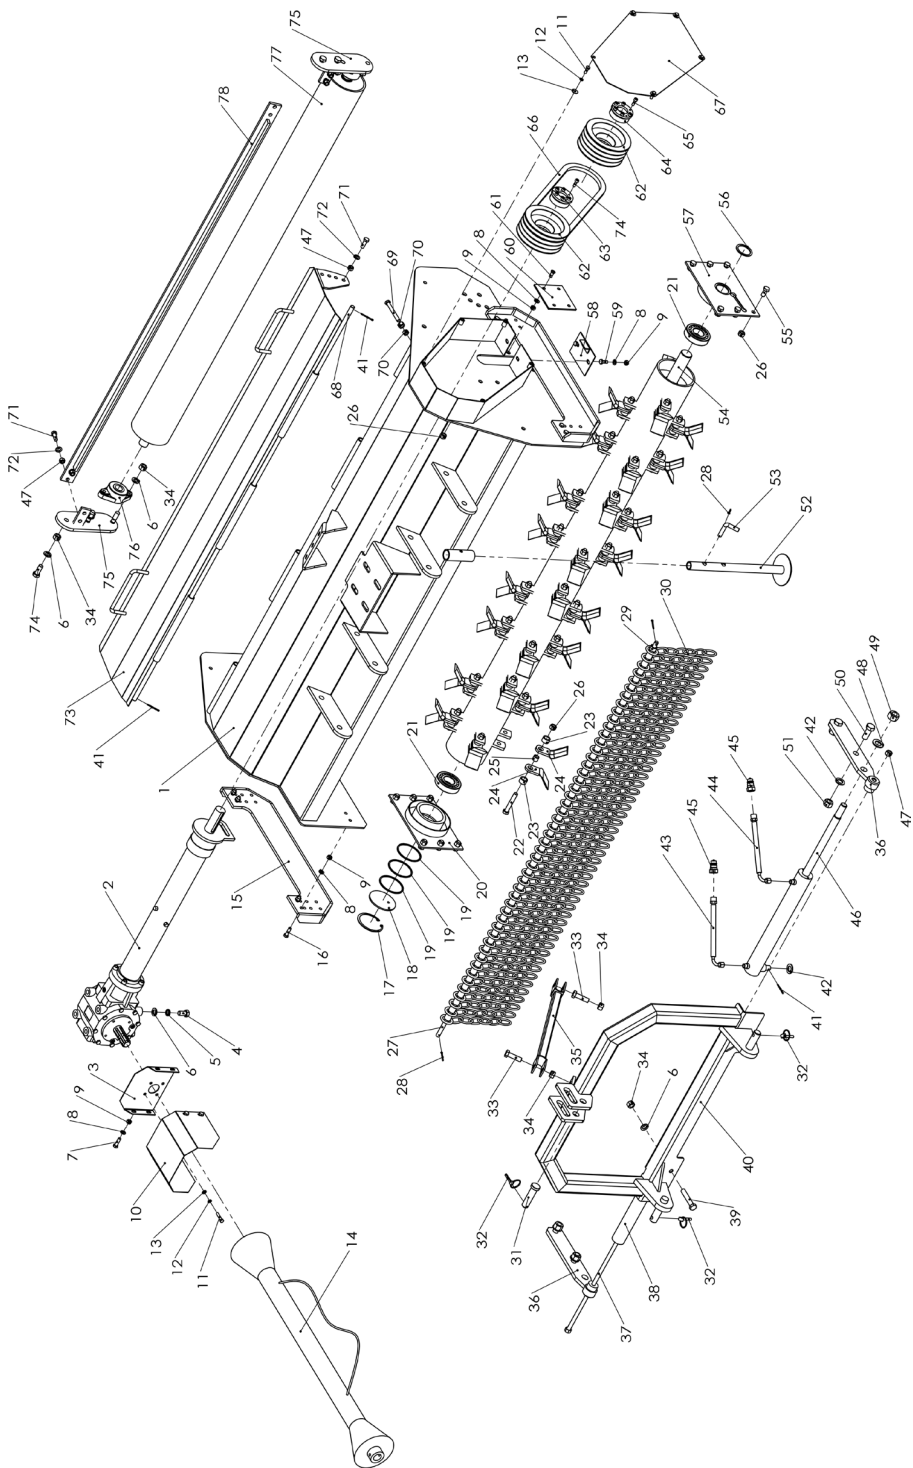

NO	DESCRIPTION	QTY.	NO	DESCRIPTION	QTY.
1	Body	1	26	Locking nut M14 VKM200	45
2	Angle gear	1		Locking nut M14 VKM250	53
3	Cover plate	1		Locking nut M14 VKM280	57
4	Hex bolt M16x30	4	27	Shaft to chain	1
5	Lock Washer Ø16	4	28	Split pin	2
6	Flat washer	14	29	Spacer - chain VKM200	52
7	Hex Bolt M10x30	4		Spacer - chain VKM250	69
8	Flat washer Ø10	18		Spacer - chain VKM280	77
9	Lock nut M10	18	30	Chain VKM200	52
10	PTO-shaft protection	1		Chain VKM250	68
11	Bolt M8x16	9		Chain VKM280	77
12	Lock Washer Ø8	9	31	Pin - 3 point	1
13	Flat washer Ø8	9	32	Locking pin - 3 point	3
14	PTO-shaft	1	33	Bolt M16x55	2
15	Wear skid	2	34	Lock nut M16	12
16	Hex Bolt M10x35	8	35	Stabilizer bar	1
17	Locking ring	1	36	Articulation plate	2
18	Cover for stock	1	37	Shaft	1
19	Spacer Ø100	3	38	Pipe	1
20	Bearing housing	1	39	Bolt M16x90	2
21	Bearing 1309	2	40	3 Point frame	1
22	Bolt M14x90 VKM200	32	41	Split pin Ø5x50	3
	Bolt M14x90 VKM250	42	42	Flat washer Ø20	5
	Bolt M14x90 VKM280	44	43	Hydraulic hose 2.1 m	1
23	Spacer VKM200	64	44	Hydraulic hose 2.6 m	1
	Spacer VKM250	80	45	Hydraulic	2
	Spacer VKM280	88	46	Cylinder	1
24	Flails VKM200	64	47	Lock nut M12	7
	Flails VKM250	80	48	Flat washer Ø24	1
	Flails VKM280	88	49	Lock nut M24	1
25	Spacer between flails VKM200	32	50	Bolt M20x50	4
	Spacer between flails VKM250	40	51	Lock nut M20	4
	Spacer between flails VKM280	44			

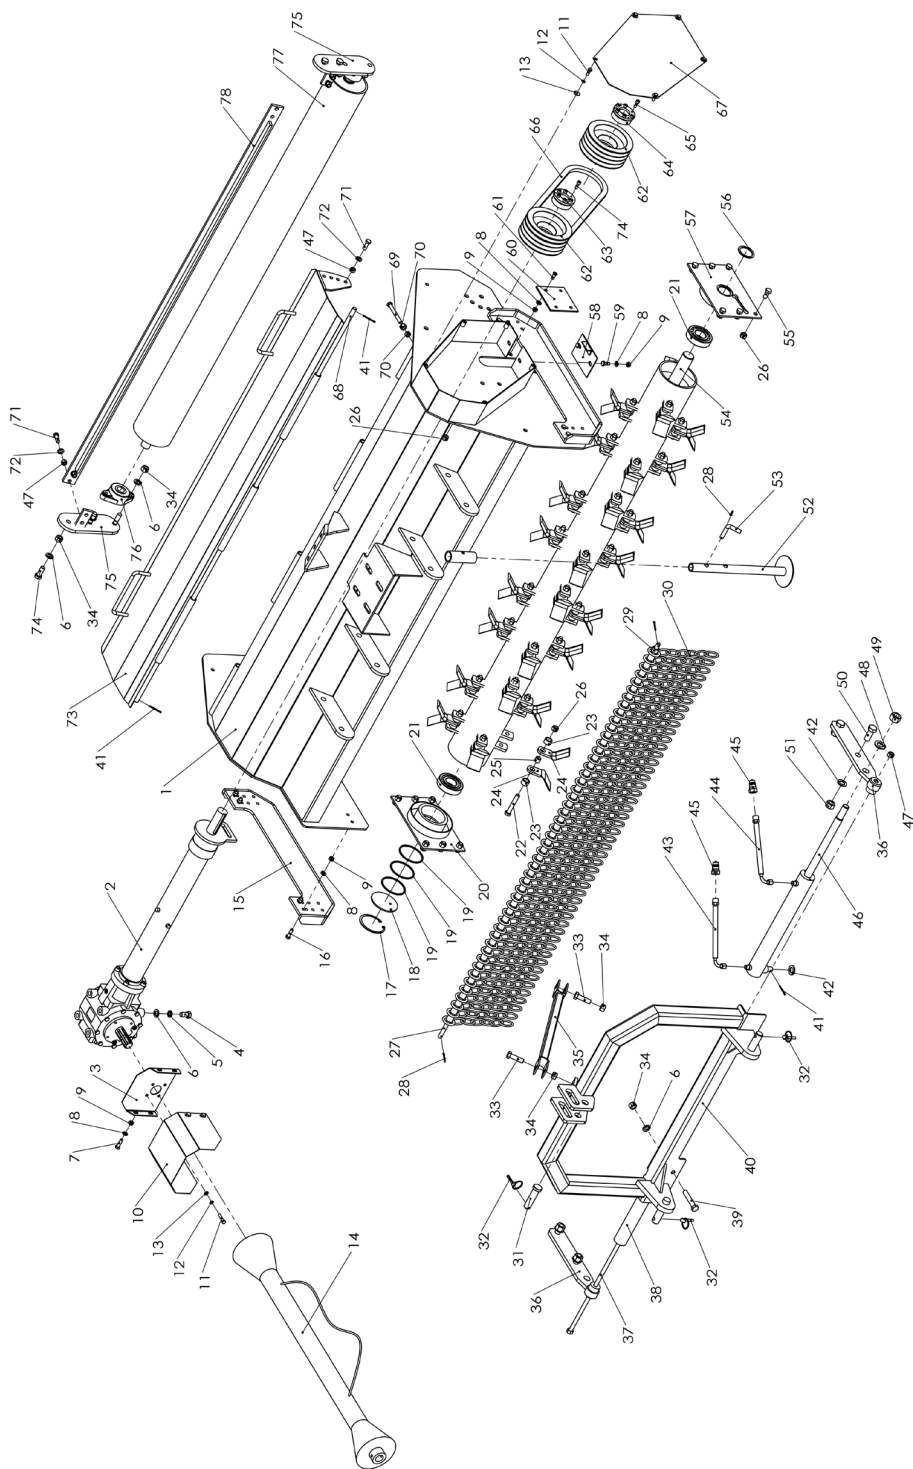

NO	DESCRIPTION	QTY.
52	Outrigger	1
53	L-pin	1
54	Cutter roll	1
55	Bolt M14x25	12
56	Spacer - Nylon	1
57	Bearing housing - left	1
58	Lock plate	1
59	Bolt M10x25	2
60	Sheet - caps	1
61	Bolt M10x25	4
62	Pulley	1
63	Clamping Bushing Z6-40x80	1
64	Clamping Bushing Z6-45x80	1
65	Hex bolt M8x25	14
66	Belt B1320	4
67	Belt cover	1
68	Shaft for protective cover	1
69	Bolt M12x100	1
70	Nut M12	2
71	Bolt M12x35	6
72	Flat washer Ø12	6
73	Protective hatch rear	1
74	Bolt M16x40	4
75	Bracket for Roll	2
76	Bearing UCFL206	2
77	Roll	1
78	Scrape	1

We are grateful for your help pointing out any inaccuracies in the Kellfri product delivered to you. Before making a complaint read Kellfris general warranty and sales conditions in our catalog as well as the enclosed User's manual that comes with the machine.

Please fill in the details below and attach photo and other information in order to process your request.

Buyer:	Customer number:
Adress:	Invoice number:
E-mail:	Phone nr:

When was the product delivered?	When was the product taken into operation?	Did the product functioned as it should upon the first operation?
--	---	--

Defect product / part:

.....

Problem description:

.....

.....

Describe the sequence of events:

.....

.....

.....

.....

.....

.....

.....

.....

Other:

.....

.....

Submit Complaint form and photo to:

Kellfri AB

Division of Services : Contact Kellfri retailer

Or e-mail service.

info@kellfri.se

Signature:	Date:
-------------------	--------------

WARRANTY TERMS AND CONDITIONS

Validity of the warranty - Kelifri's Warranty is valid 12 months from the date of purchase.

This warranty replaces - Compensation for spare parts after acknowledgment that the fault lies on the material or manugreasureing deffects.

This guarantee do not cover

- Labour costs
- Travel expenses
- Any modification that the buyer himself has/had made.
- Any consequential damages that occured due to damage to the machine.
- Damage due to normal deterioration of the machine, inadequate: service, user inexperience or use of spare parts which are not original.
- Wear parts such as hoses, seals, oils, and mechanical belts



EG-FÖRSÄKRAN OM MASKINENS ÖVERENSTÄMMELSE, ORIGINAL

EC-DECLARATION OF CONFORMITY

According to 2006/42/EC, Annex 2A

Kelfri AB

Munkatorpsgratan 6

532 37 Skara, Sweden

Declares that the machine

Name: 35-VKM200, 35-VKM250, 35-VKM280

Type: Flail mower

Complies with all applicable provisions of the Machinery Directive 2006/42/EC.
Other equipment must meet the hardware requirements of the Directive.

Tina Baudtler, CEO 2015-09-08

Kelfri AB is constantly working on further developing their products and therefore reserves the right to modify, among other things the design and appearance without further notice.

CUSTOMER SERVICE

You are always welcome to give your feedbacks, reviews or ask us about our tools and products.

Kelfri AB

Phone: 0046 (0)511 - 242 50

Fax: 0046 (0)511 - 168 33

E-mail: info@kelfri.se