



Kellfri[®]

21-LUW07 ATV LOG SKIDDER



**CAREFULLY READ THE OPERATING INSTRUCTIONS BEFORE USING THE PRODUCT!!
TRANSLATED FROM THE ORIGINAL**

INTRODUCTION

Thank you for choosing a product from Kellfri AB. By following general safety information, operating instructions and common sense, you will have many years of enjoyable use of the product. Kellfris equipment and products are aimed to be use by active farmers with high demands on functionality.

PRODUCT INFORMATION

A log skidder for your ATV with rotating spiked rail with removable and foldable bolsters. The supplied winch allows you to pull a log towards you and lift it into the spiked rail in one movement. Hot-dip galvanised. Equipped with rotating tow bar.

ART. NR	21-LUW07
Height:	2,45 m
Internal wall width	0,61 m
Track width:	1,17 m
Height	1,9 m
Weight:	70 kg
Tyres:	22 x11-8
Towing device	Turnable
Winch	Included

INTENDED USE

Intended for transporting log.

BASIC SAFETY INSTRUCTIONS

 
Before using the equipment or product, and for the safety of yourself and others, you must read the safety instructions and the instruction manual and understand its contents. Always keep the safety instructions and instruction manual handy for users of the equipment or product. For the safety of both yourself and others, it may be a good idea to read through the safety instructions every now and then.

If the safety instructions or instruction manual gets damaged or in any other way cannot be used, new copies may be ordered from:

Kellfri AB, Munkatorpsgratan 6, 532 37 SKARA

Sweden. Tel.: +46 (0)511 242 50 (Pls. contact the retailer) <https://www.kellfri.co.uk/>

Do not use the equipment or product if you feel ill, tired or are under the influence of alcohol. Do not use the equipment or product if you are taking prescribed medication or drugs. Always comply with general rules of the road and applicable rules stipulated by the Swedish Protection of Animals Act. People under the age of 15 are not allowed to use the equipment.

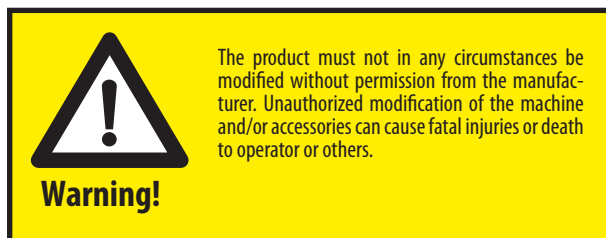







PRODUCT SAFETY INSTRUCTIONS

- Read the Instruction Manual carefully before using the machine.
- Always check the performance of the machine combined to be used to ensure the safety and functionality.
- Never overload the trailer!
- Never leave the driver's seat until the brakes on the towing vehicle have been applied.
- Danger zone 5 meters. No one other than the operator may be present within the danger zone during operation.
- The operator may under no circumstances stay under suspended loads.
- The trailer may not be parked with the load unattended!
- When unhitching the trailer, it must be empty and on a level surface with the trailer wheels secured using suitable brake blocks.
- To stop trailer movements in the event of an emergency, stop the tractor.
- Be aware of the risk of entrapment when winching.
- The trailer is not equipped with lights and is only intended to be used during the day. If necessary, the trailer can be fitted with a magnetic light.
- An SMV sign must be attached when traveling on public roads. Maximum speed for a full load is 30km / h
- The timber trailer is fitted with a 50 mm ball coupling. Maximum thrust 1000 kg. At greater wear, replace the ball coupling.
- Skidders are not designed to be driven on public roads.

WARNING DECALS

Make sure that the warning decals are always visible, clean the warning labels if necessary. Do not wash with high pressure washer directly on the warning label. If any part of the decal is worn or label becomes frayed or otherwise unreadable, order new decals.

An SMV sign must be visible and mounted when travelling on public roads.

SYMBOL	EXPLANATION
	Read the operating manual! Stop the engine for repairs
	Risk zone 5 m
	Warning! Risk of crushing hands! Warning! Risk of crushing feet!
	Do not allow anyone to stand under suspended loads. Warning—moving parts.
	Warning! Accident risk for children! Children are not allowed in the vicinity of the machine Prohibition to stay on the machine
	The product is CE marked

INCASE OF EMERGENCIES

In case of an emergency please dial 112.

Keep cell phone or emergency phone available specially when working alone. First aid kit and fire extinguishers must be kept easily accesable during all work, maintenance and service.

PERSONAL PROTECTIVE EQUIPMENT

Wear suitable clothing and footwear. Do not wear loose clothing or jewelry when working with the equipment. Remember to put up long hair when working with equipment that rotates. Wear protective gloves during maintenance. Hearing protection should be used when operating the machine.



SURROUNDINGS

Check and make sure that the area is clear of people, children and objects before switching on or using the equipment. Risk of serious personal injury.

Be especially careful if children are in the area where the equipment is being used or stored. Check that there are no low-hanging power lines within the work area. Be careful when working on slopes and near ditches.

Always work alone with equipment designed for single - purpose tools/products. Never have junk/debris lying in your work area. Have workspaces clean. Always respect the risk zone.



BEFORE USING

Read the instruction manual carefully. Be sure that you understand the safety information, instruction manual and warning labels. Use common sense when using and use the appropriate personal protective equipment. Always check the performance of the machine combination to be used. Importantly, these harmonize and match in a satisfactory manner. This is to ensure the implement function and your and others' safety.

Visually inspect the gear or the product before use. Fix or replace damaged and worn parts immediately to reduce the risk of injury. Lubricate moving parts and check that all screw-nuts and bolts are tightened. Clearing when necessary.

Learn and remember the correct working methods. Beginners should always keep a low speed, use extreme caution before routine and product knowledge is achieved. The user/customer is responsible to handle the situation correctly. The product should not be taken into use unless it can be done in a safe way for the user.

OPERATING THE MACHINE

Only people who understand the safety information and instructions in this manual may operate the equipment. Be alert and careful when working with the machine and only use the tool or product in the manner described in this manual. When working with equipment that has moving parts, there is always the risk of injury. Be careful when working with equipment equipped with hydraulic hoses ,oil under pressure can penetrate the skin. Seek medical attention immediately if this occurs. Always work alone with the tools that are defined as single purpose tools. Respect the equipment's danger zone.



For safety, this product should only be used in the manner described in this manual. The user is responsible for the instruction to be read through and followed.

Warning!

- Check that the equipment is undamaged before connecting it to the vehicle.
- Connect the logskidder to the vehicles ball-coupling
- Always apply ATV-vehicles break when loading and unloading

OPERATION

- Skidders is intended for transporting logs.
- Pull and lift the log using the winch and put it on the cart.
- Make sure the block is secured and can not come loose. Secure the log with a link on the cart.
- Drive carefully and always check the movement of the load during transport.
- CAUTION! Be careful during transport, watch out for obstacles that may be hidden in the ground. Never overload the trailer!



Never use faulty safety equipments!

Warning!

AFTER USE

- Ensure that the equipment or product is stable before disconnecting it from the vehicle.
- On a slope, place chocks on the wheels before disconnecting.
- Always keep the equipment or product on a dry surface, preferably under roof.
- Wash down the trailer if necessary.

TRANSPORT AND STORING

Make sure there are no people, children and foreign objects around the area before transporting the machine. Always take an extra caution during the transport. Ensure that the product is well secured and that transport brackets are mounted. Always place the load as low as possible. Respect the danger zone even during transport. When lifting the equipment, never go underneath suspended loads. Trailer used for transport should have working brakes.

Always store the machine in a dry place preferably underneath a cover when not in use. Ensure that the product is stable and not likely to tip over. Never let children play where the machine is being stored. Always keep in mind the risk of tipping!

MAINTENANCE AND SERVICE

Ensure that the unit is stable and cannot tip over during maintenance and service. Replace damaged or worn parts immediately to reduce the risk of abrasion. Always perform maintenance, service and inspection, as recommended. Use only original replacement parts or spare parts with equivalent performance to reduce the risk of damage. Check all nuts and bolts are tightened after performing maintenance and service.

SERVICE	INTERVAL	MEASURE
Tires	Before each run	Check the air pressure in the tires. It should always be less than the recommended. (maximum 1.5 bar)
Wheel nuts	First check after 2-3 hours driving Then 2-3 times / year	Tighten all the wheel nuts 90Nm
Winch	Regularly	Lubricate the cable pulley

ERROR	MEASURE
Load more than the maximum weight.	Bad wheel bearings, adjust or replace if necessary. Low air pressure, check the air pressure in all tires (1.2-1.5 bar)




RECYCLING

Disposal of the product, disassemble and transport to the municipality's recycling station. Contact your local authority for further information.



INSTALLATION INSTRUCTIONS

Check so that all parts are included, the mounting bolts are mounted on the frame.



No.	Description	Qty.
1	Frame	1
2	Wheel hubs	2
3	Wheels	2
4	Tow bar	1
5	Load Beam	1
6	Arm winch bracket	1
7	Struts	1
8	Winch	1
9	Pole	2
10	Winch reel	1

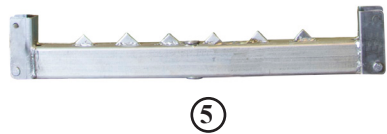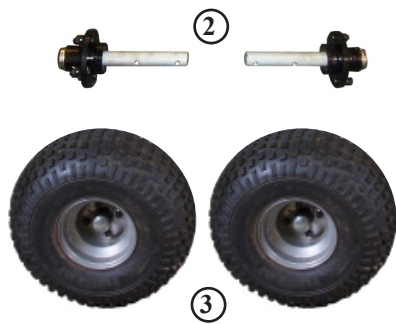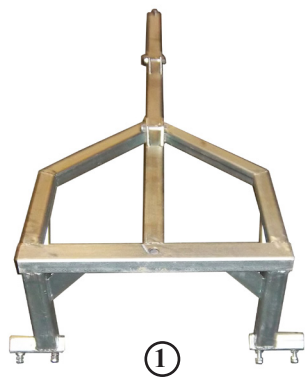   

  1. Install the wheel hub (Figure 1), then fit the wheel (Figure 2) on each side. Tighten all bolts and lubricate wheel bearings with grease.

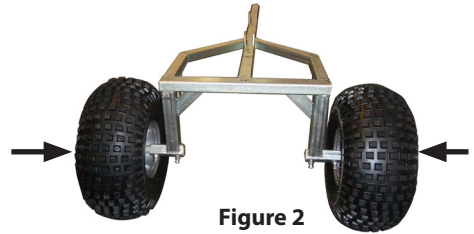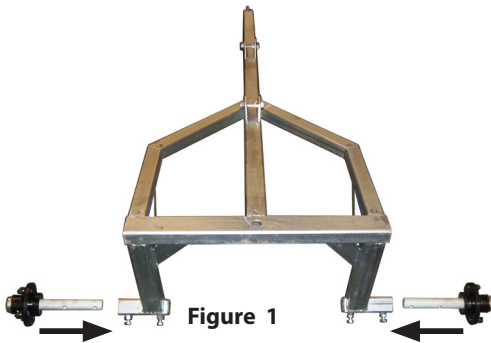

  2. Mount the arm, stabilizer bar (Figure 3) and the load beam (Figure 4) on the frame, tighten all the bolts.

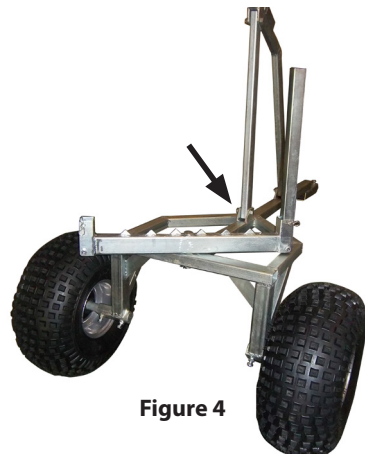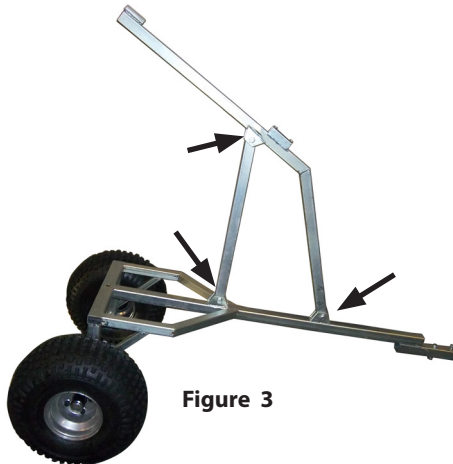

3. Mount the wire reel, ball coupling and winch (figure 5)
4. Thread the wire through the wire spool before installing the hook on the cable end. Tape the cable end to facilitate installation and to prevent the wires come loose.

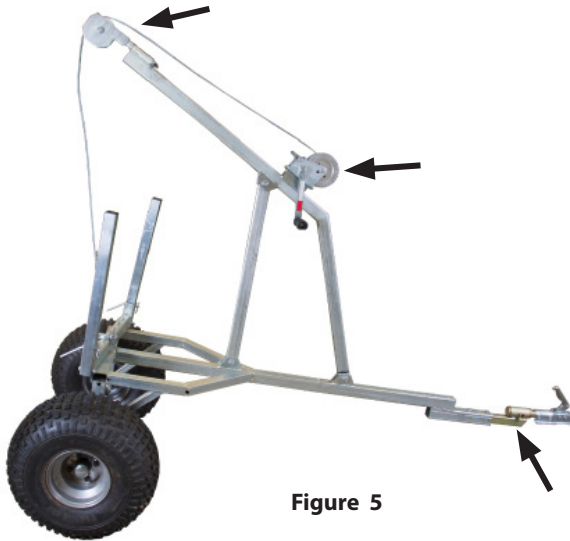 


Figure 5

5. Assemble the poles on the load beam (figure 6)



Figure 6

We are grateful for your help pointing out any inaccuracies in the Kellfri product delivered to you. Before making a complaint read Kellfris general warranty and sales conditions in our catalog as well as the enclosed User's manual that comes with the machine.

Please fill in the details below and attach photo and other information in order to process your request.

Buyer:	Customer number:
Adress:	Invoice number:
E-mail:	Phone nr:

When was the product delivered?	When was the product taken into operation?	Did the product functioned as it should upon the first operation?
--	---	--

Defect product / part:

Problem description:

Describe the sequence of events:

Other:

Submit Complaint form and photo to:

Kellfri AB

Division of Services : Contact Kellfri retailer

Munkatorpsgratan 6

532 37 Skara

Or e-mail service.

info@kellfri.se

Signature:	Date:
-------------------	--------------

KELLFRI AB

Munkatorpsgratan 6

SE-532 37 SKARA

Phone: +46 (0)511-242 50

Fax: +46 (0)511-168 33

Web

www.kellfri.se

E-mail

info@kellfri.se

Issue:: 2014-01-01

WARRANTY TERMS AND CONDITIONS

- | | |
|-----------------------------|--|
| Validity of the warranty | - Kelifri's Warranty is valid 12 months from the date of purchase |
| This warranty replaces | - Compensation for spare parts after acknowledgment that the fault lies on the material or manufacturing defects. |
| This guarantee do not cover | <ul style="list-style-type: none">• Labour costs• Travel expenses• Any modification that the buyer himself has/had made.• Any consequential damages that occurred out of damage to the machine.• Damage due to normal deterioration of the machine, inadequate: service, user inexperience or use of spare parts which are not original.• Wear parts such as hoses, seals, oils, and mechanical belts |

EG-FÖRSÄKRAN OM MASKINENS ÖVERENSTÄMMELSE, ORIGINAL

EC-DECLARATION OF CONFORMITY

According to 2006/42/EC, Annex 2A

Kelfri AB

Munkatorpsgratan 6

532 37 Skara, Sweden

Declares that the machine

Name: 21-LUW07

Type: ATV Log Skidder

Complies with all applicable provisions of the Machinery Directive 2006/42/EC.

Other equipment must meet the hardware requirements of the Directive



Tina Baudtler, VD

Kelfri AB is constantly working on further developing their products and therefore reserves the right to modify, among other things the design and appearance without notice

CUSTOMER SERVICE

You are always welcome to give your feedbacks, reviews or ask us about our tools and products.

Kelfri AB

Telefon: 0046 (0)511 - 242 50

Fax: 0046 (0)511 - 168 33

E-post: info@kelfri.se



Latest version: 2015-09-22